


## Instructions Before Use

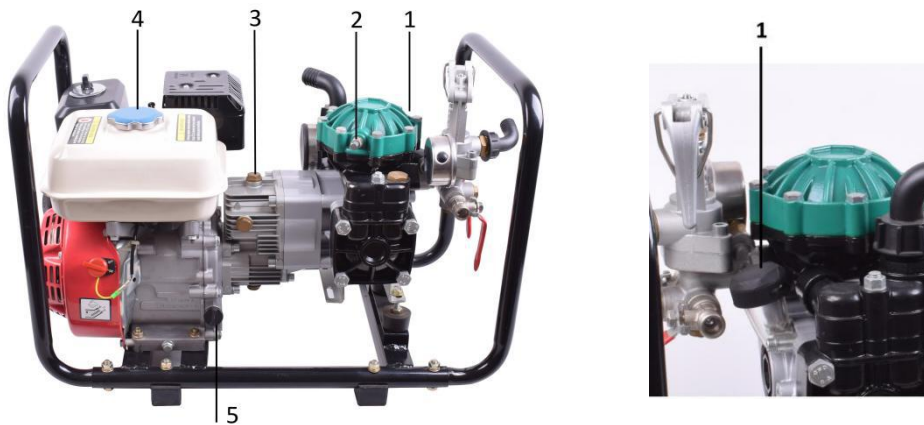

- 1- Fill in engine oil (SAE 30) for the pump until half level of the oil cup.
- 2- Check the inflation pressure of the accumulator. If it is low, inflate to 0.5-0.6MPa.
- 3- Fill in gear oil (SAE 90, about 0.3kg) for the gear box .
- 4- Fill in gasoline.
- 5- Fill in 4-stroke engine oil (SAE 10W-30 is recommended for general use).

### Note:

1. After initial 50 working hours, change the engine oil in the pump and the gear oil in the gear box. Then change them in every 300-500 working hours.
2. Check the inflation pressure of accumulator in every 50 working hours.
3. For other detailed information, please read the manuals of gasoline engine and pump.