

User Manual of Remote Control

Thank you for purchasing the remote control. Please be noted that max. 6 pcs remotes can be programmed for swing gate opener and sliding gate opener. If you prefer to use more than 6 remote controls with your gate opener, please purchase an external receiver which allows you to program up to 100 additional remote controls.

1

Use for Swing Gate Opener


Learn the remote

Press and release the learn button, the LED will display "Ln", then press the key in the remote twice in 2 seconds, the LED will flash "Ln" for 4 seconds then back to "-.-". Now the remote has been learnt successfully.

Erase all the remote codes

Press and hold the learn button until the LED display shows "dL". Now all remote codes have been erased. Release the learn button and the display turns back to "-.-".

2

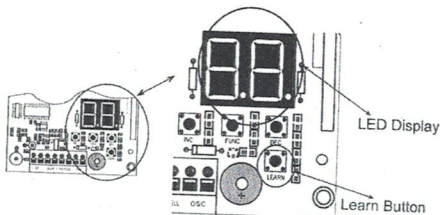

3

Use for Sliding Gate Opener


Learn the remote

Press and release the learn button, the REM LED light will be on, then press the key in the remote twice in 2 seconds, the REM LED light will flash for 4 seconds. Now the remote has been learnt successfully.

Erase all the remote codes

Press and hold the learn button until the REM LED light is off. Now all remote codes have been erased.

4

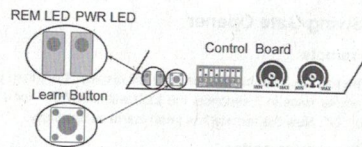

Note: If a remote is used for external receiver, please follow programming instruction in the separate external receiver manual.

5